




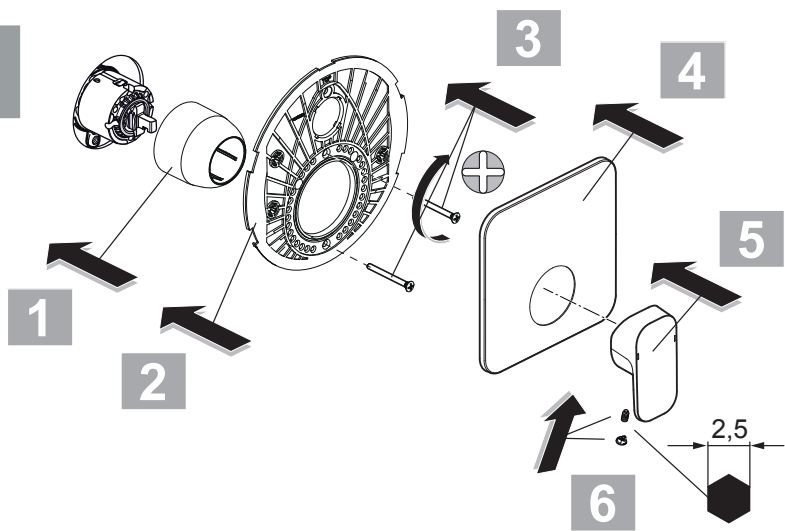



1

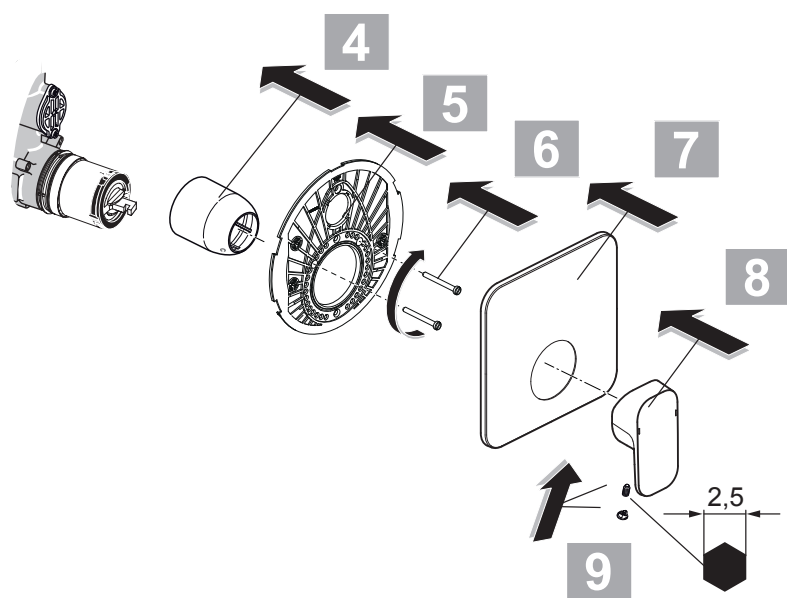



2a

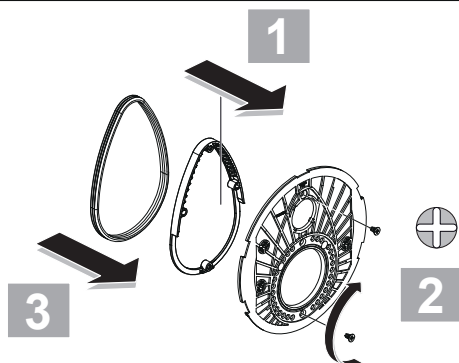

2b

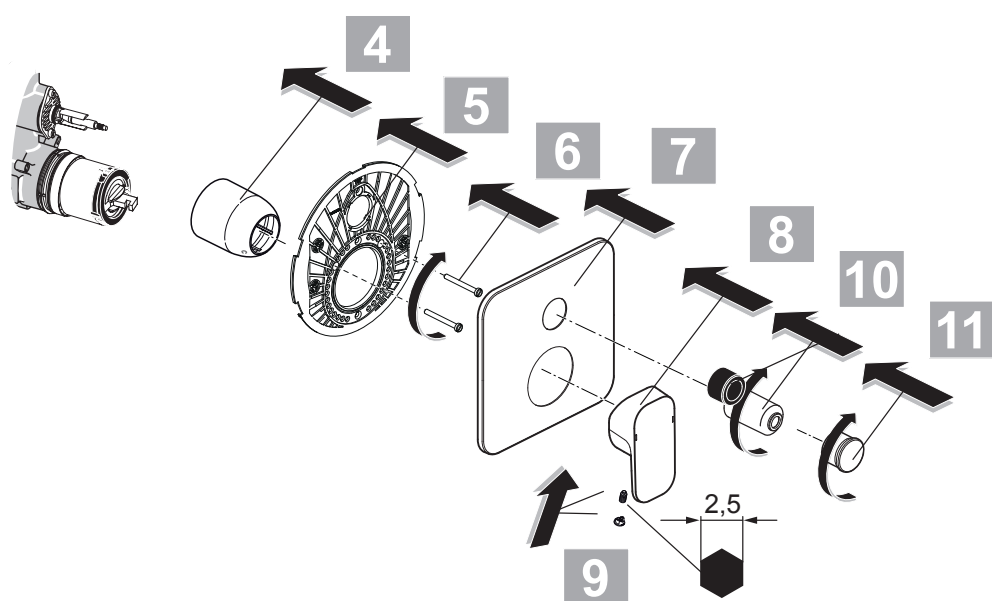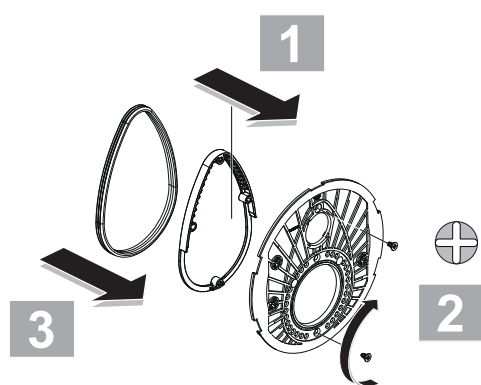

1
5

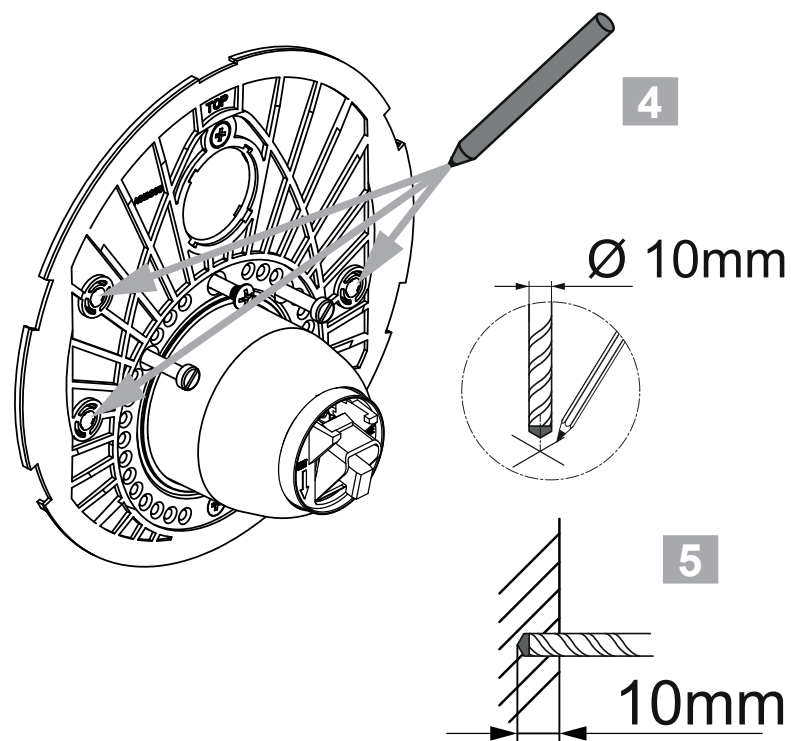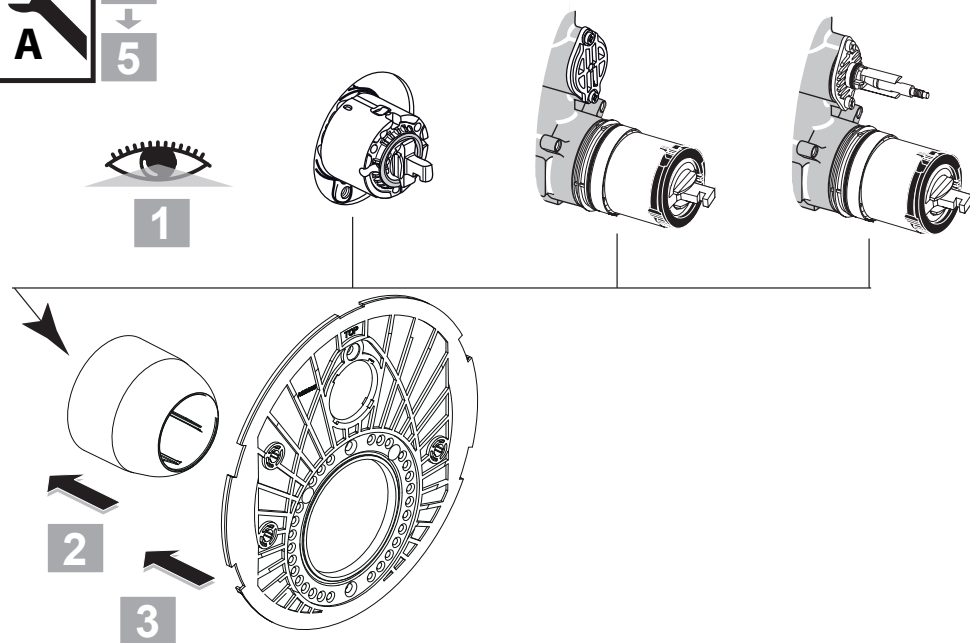


Ideal Standard

Reno Kit

A 1301 ..





1220 / A 868 824
Made in Germany

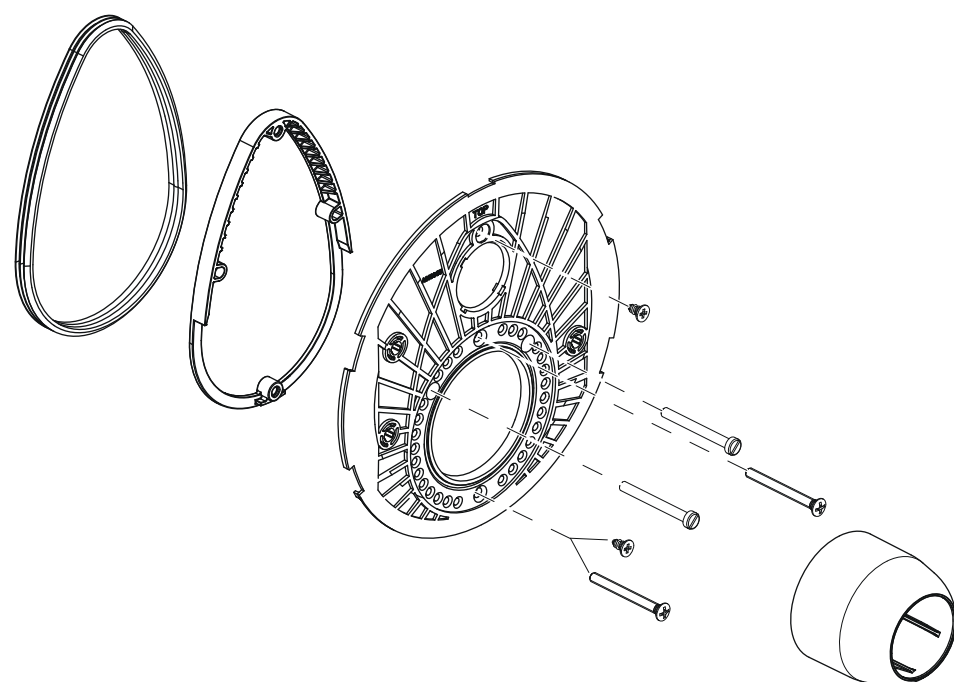













Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com



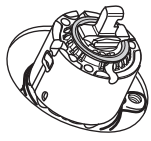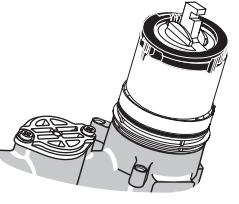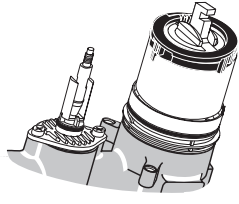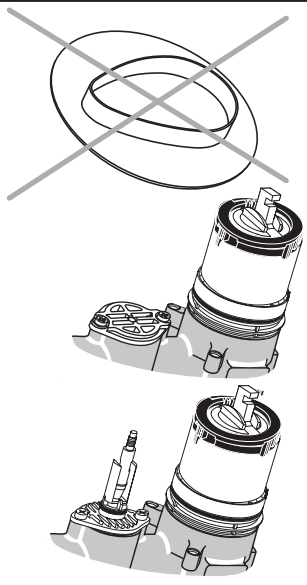

A1301NU

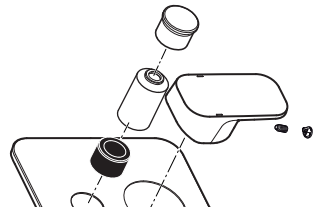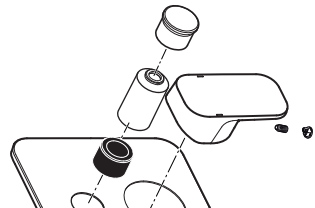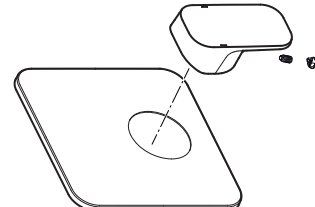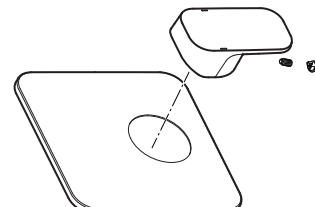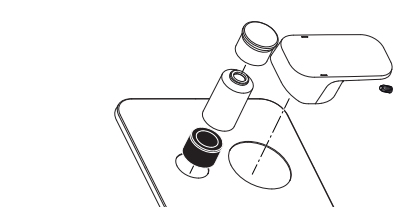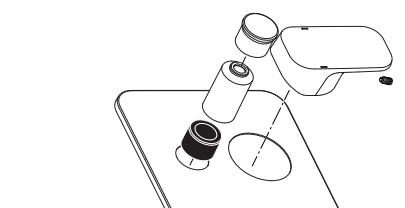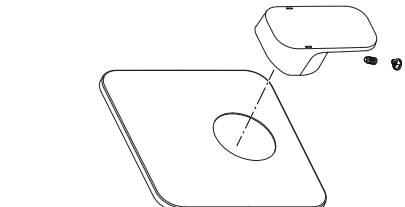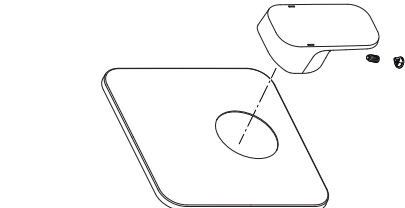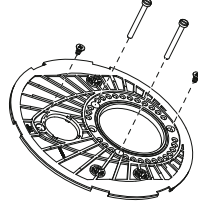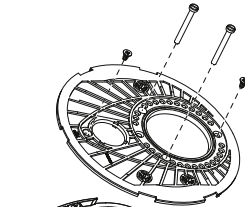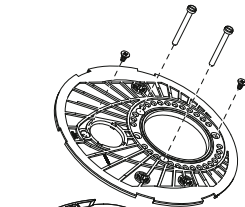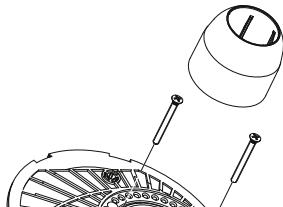

Beispiel
example
esempio

